

ADAPTATION ASSEMBLY INSTRUCTIONS

AmTryke[®]

The therapeutic tricycle for people with disabilities

For questions or to place an order, please contact:

Amtryke, LLC.
(800) 838-1845 x114
amtryke@ambucs.org
www.ambucs.org

AM Series Crank Remover

Part Number 30-23-0103

Works with AM-9/10/12S/12/16

Tools Needed

14 mm Socket & Ratchet for AM-12 or AM-16

Flat Head Screw Driver


16 mm or Adjustable Wrench

6 mm Allen Wrench for AM-9


Puller jaw only used on AM-9

AM-12 & AM-16 Crank Removal Instructions

AM-9 Puller Jaw
Forcing Screw
Crank Adaptor

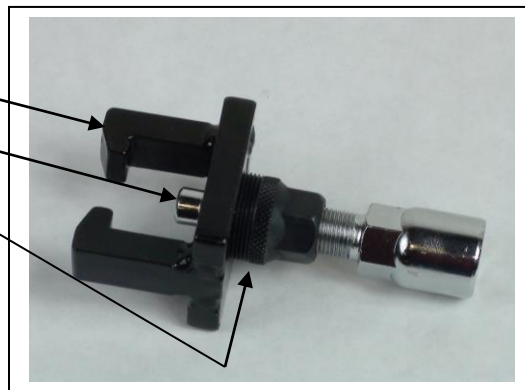

1) Use a Flat Head Screw Driver and pry off the grey crank cap that covers the crank securing bolt.

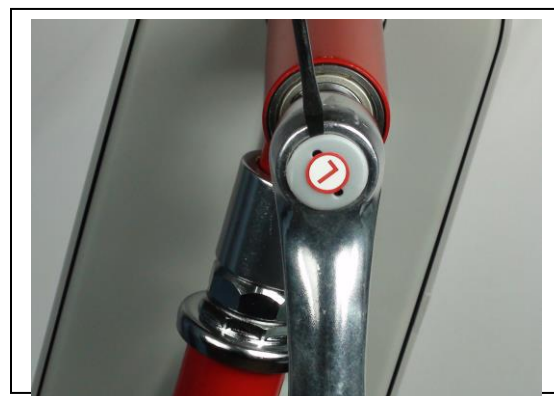

Revised: 4/16/2016


n:\amtryke\manuals and instructions\accessories\am-12 crank removal\am12-am16 crank removal.doc

2) Use a 14 mm Socket to remove the crank arm securing bolt.




3) Remove the crank adaptor from the AM-9 puller jaw by turning it counter clockwise.

Note: The puller jaw is not used on the AM-12 or AM-16 crank arm removal.

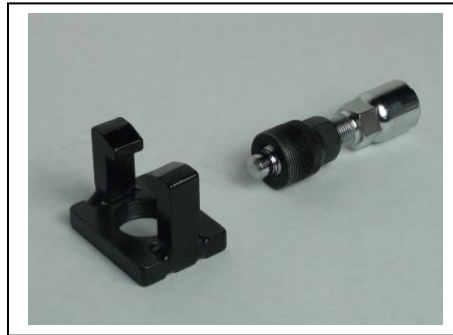

4) Screw the crank adaptor into the crank arm fully by turning it clockwise. Be careful and do this by hand at first – taking care not to force or strip the threads.

Note: The crank adaptor must be fully seated into the crank arm or before proceeding to next step. You can damage the inner crank arm threads if not careful.

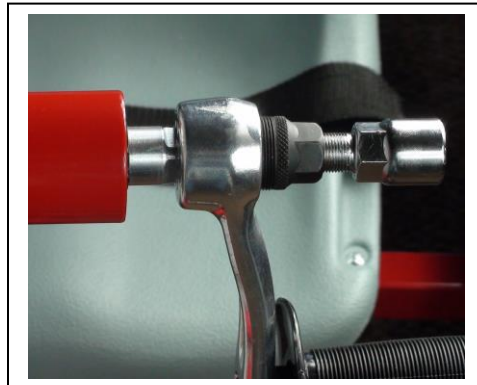

5) Using either a 16 mm open end wrench or adjustable wrench, turn the forcing screw clockwise until the crank arm slides off the shaft.

